

Assembly



Atenea, Hermes, Apollo, Artemis and Cronos | Zeus | Atenea+Ramps | Lateral framing profiles for recessed doormats



Place the self-adhesive black foam strips parallelly to each other with the adhesive part facing upwards. Peel off the protective paper a few centimeters. The exterior foam strips must be at a distance between 2-5 cm from the edge. The profile with the **Basmat** label must be the last one to be installed.



Keep placing the **Basmat** profiles clicking one into the next one and sticking them down to the black foam.

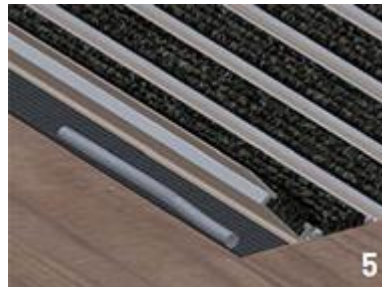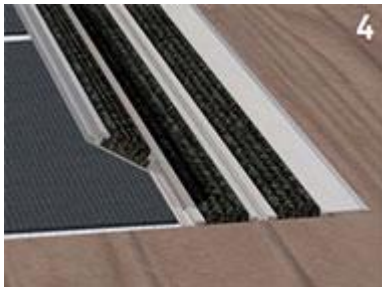

Continue the process until the last profile and adjust **Basmat** in the mat well. Insert the foam tubes under the initial and final wings.



Fix **Basmat** to the floor with adhesive or silicone. If desired, **Basmat** can be screwed to the floor (see Optional section).



Retire partially or slide the finish strips. Drill the initial and ending profile on both ends to fix **Basmat** to the floor.



Screw **Basmat** to the floor. Stick the finish strips to the aluminium profiles.

WARNING:

- The mats of plastic or brushes finish will be delivered with a self-adhesive angle (ref. V71029) to avoid the movement of the inserts (Please stick it at the end of the mat). If the mat is tight in the mat well, it is not necessary to use it.
- The profiles must be clean in order to be assembled properly.
- It could be necessary more than a person to install big size doormats (approx 1 person each 1,5 m profile length).
- The surface where **Basmat** is going to be installed must be flat and uniform.